

#### User Guide for the

# IR Remote Commander with Audio Controls

#### August 2022

The remote provides basic camera and conference functionality, including pan/tilt/zoom, position presets, focus, volume control, and muting. In multi-camera environments, it also enables you to select which camera to control.

Before you can use the remote, you will need to install the batteries.

### Installing the Batteries

The remote uses two AAA batteries.

- 1. Remove the cover from the back of the remote. You may need to press down on the upper edge while sliding it off.
- 2. Install the batteries as shown in the diagram in the battery opening.
- 3. Slide and snap the cover back into place.

### Tips for Using the Remote

**Presets:** The remote provides access to camera presets. Your camera's web interface may provide access to additional camera presets.

**Camera selection:** The remote has three IR channels, so it can control up to three cameras independently. Check your camera's manual for information on setting it as camera 1, camera 2, or camera 3. By default, Vaddio cameras respond as camera 1

**Troubleshooting tip:** If the camera does not respond to the remote, press the Camera 1 button and try again. If that doesn't fix the problem, try the other camera selection buttons.



) (s) (€ ∕addi⊙

## IR Remote Commander with Audio Controls Quick Reference

The remote may have controls for capabilities that your camera does not have. Some buttons behave in different ways depending on the camera's capabilities.

Data Screen button – Press to display the camera's IP and MAC addresses on the video output(s); press again to dismiss the information display.   Backlight button – Adjusts for excess light behind the camera's subject.   Power button and indicator – Set the camera to standby mode, or return to full-power mode.   Camera buttons – Select IR channel 1, 2, or 3. Vaddio cameras default to camera 1.   Std Pan and Rev Pan buttons – Set pan direction relative to the person using the remote. Standard is from the camera's perspective. Reverse is from the perspective of a person facing the camera.   Arrow buttons – Pan and tilt.   Home button – Moves the camera to the Home preset, if Home has been defined.   Pan-Tilt Reset button – Correct a motor calibration fault (blinking yellow light).   Volume +/- buttons – Increase or decrease the volume from the connected speaker.   Mute button – Mute connected or built-in microphone(s).   Zoom T and W buttons – Zoom in (T, telephoto) or out (W, wide-angle).   Position Preset buttons – Set, clear, or select preset shots.		in american ways depending on the camera's capabilities.
Subject.   image: subject.	Data Screen	addresses on the video output(s); press again to dismiss the
Image: constraint of the present of the present of the present of the present using the remote. Standard is from the camera's perspective. Reverse is from the perspective of a person facing the camera.   Image: constraint of the persent using the remote. Standard is from the camera's perspective. Reverse is from the perspective of a person facing the camera.   Image: constraint of the persent using the remote. Standard is from the camera's perspective. Reverse is from the perspective of a person facing the camera.   Image: constraint of the persent using the remote. Standard is from the camera's perspective. Reverse is from the perspective of a person facing the camera.   Image: constraint of the persent using the remote. Standard is from the camera is from the persent using the remote. Standard is from the camera's perspective. Reverse is from the perspective of a person facing the camera.   Image: constraint of the persent using the remote. Standard is from the constraint of the Home preset, if Home has been defined.   Image: constraint of the persent using the remote. Subtron – Moves the camera to the Home preset, if Home has been defined.   Image: constraint of the persent using the remote. Subtron – Use automatic focus. Overrides manual near and far buttons.   Image: constraint of the persent using the remote. Subtron – Correct a motor calibration fault (blinking yellow light).   Image: constraint of the persent o	Back Light	
default to camera 1.   Image: Std Pan and Rev Pan buttons – Set pan direction relative to the person using the remote. Standard is from the camera's perspective. Reverse is from the perspective of a person facing the camera.   Image: Std Pan and Rev Pan buttons – Pan and tilt.   Image: Std Pan and Default to a person facing the camera.   Image: Std Pan and Everse is from the perspective of a person facing the camera.   Image: Std Pan and tilt.   Home button – Moves the camera to the Home preset, if Home has been defined.   Image: Std Pan and tilt.   Home button – Moves the camera to the Home preset, if Home has been defined.   Image: Std Pan and tilt.   Image: Std Pan and to button – Use automatic focus. Overrides manual near and far buttons.   Image: Std Pan and tilt.   Image: Std Pan and to button – Correct a motor calibration fault (blinking yellow light).   Image: Std Pan and to peaker.   Image: Std Pan and W buttons – Increase or decrease the volume from the connected speaker.   Image: Store T and W buttons – Zoom in (T, telephoto) or out (W, wide-angle).   Image: Store T and W buttons – Zoom in (T, telephoto) or out (W, wide-angle).	Power	· · · ·
Person using the remote. Standard is from the camera's perspective. Reverse is from the perspective of a person facing the camera.   Arrow buttons – Pan and tilt.   Home button – Moves the camera to the Home preset, if Home has been defined.   Image: Auto Focus button – Use automatic focus. Overrides manual near and far buttons.   Image: Pan-Tilt Reset button – Correct a motor calibration fault (blinking yellow light).   Image: Pan-Tilt Reset button – Increase or decrease the volume from the connected speaker.   Mute button – Mute connected or built-in microphone(s).   Image: Pan-Tilt Reset Image: Pan-Tilt	Camera Select	
Home button – Moves the camera to the Home preset, if Home has been defined.   Image: Auto Focus button – Use automatic focus. Overrides manual near and far buttons.   Image: Auto Focus button – Correct a motor calibration fault (blinking yellow light).   Image: Auto Focus button – Correct a motor calibration fault (blinking yellow light).   Image: Auto Focus button – Correct a motor calibration fault (blinking yellow light).   Image: Auto Focus Automs – Increase or decrease the volume from the connected speaker.   Mute button – Mute connected or built-in microphone(s).   Image: Autom Autom Automs – Zoom in (T, telephoto) or out (W, wide-angle).   Image: Autom Autom Automs – Correct Automs – Select manual focu mode and adjust the focal distance.	Std. Pan Pan THE Rey. Pan	person using the remote. Standard is from the camera's perspective.
Image: Second system and far buttons.   Image: Second system Pan-Tilt Reset button – Correct a motor calibration fault (blinking yellow light).   Image: Second system Volume +/- buttons – Increase or decrease the volume from the connected speaker.   Image: Second system Mute button – Mute connected or built-in microphone(s).   Image: Second system Zoom T and W buttons – Zoom in (T, telephoto) or out (W, wide-angle).   Image: Second system Manual Focus, Near (–), and Far (+) buttons – Select manual focu mode and adjust the focal distance.	Staf prom Pendital Reve pan Pendital Reve pan Pendital Reve pan Pendital Pendi	Home button – Moves the camera to the Home preset, if Home has
yellow light).   Image: Second	Auto Focus	
Image: Connected speaker.   Mute button – Mute connected or built-in microphone(s).   Image: Common and W buttons – Zoom in (T, telephoto) or out (W, wide-angle).   Image: Common and Common and Common and Common angle).   Image: Common and Common a	Pan-Tile Reset	· •
Zoom T and W buttons – Zoom in (T, telephoto) or out (W, wide-angle).   Manual Focus, Near (–), and Far (+) buttons – Select manual focu mode and adjust the focal distance.	Volume Mic Mute	
Image: angle).   Image: angle ang		Mute button – Mute connected or built-in microphone(s).
mode and adjust the focal distance.		
Preset Preset buttons – Set, clear, or select preset shots.	Near Manual Focus Far	Manual Focus, Near (–), and Far (+) buttons – Select manual focus mode and adjust the focal distance.
	Preset Position Presete 1 1 2 3 4 5 6	Position Preset buttons – Set, clear, or select preset shots.

### **Storing and Clearing Presets**

Depending on the camera, presets may store zoom, pan/tilt location, color settings, or some combination of these.

Your camera may have additional presets available through its web interface.

#### To store a preset:

Set up the shot. Then hold down the **Preset** button and press one of the numbered preset buttons.

#### To clear a preset:

Press and hold the **Reset** button while pressing the preset number you want to clear.

Vaddio is a brand of Legrand AV Inc. www.legrandav.com · Phone 800.572.2011 / +1.763.971.4400 · Fax +1.763.971.4464 · Email av.vaddio.support@legrand.com ·

Vaddio is a registered trademark of Legrand AV Inc. All other brand names or marks are used for identification purposes and are trademarks of their respective owners. All patents are protected under existing designations. Other patents pending.

©2022 Legrand AV Inc.