
INSTALLATION INSTRUCTIONS

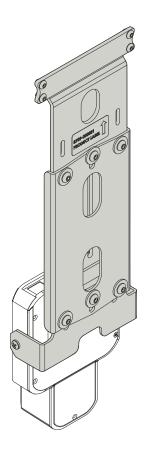

ConferenceSHOT® Thinstall™ Camera Bracket

TA210K Installation Instructions

DISCLAIMER

Legrand | AV and its affiliated corporations and subsidiaries (collectively "Legrand | AV"), intend to make this manual accurate and complete. However, Legrand | AV makes no claim that the information contained herein covers all details, conditions or variations, nor does it provide for every possible contingency in connection with the installation or use of this product. The information contained in this document is subject to change without notice or obligation of any kind. Legrand | AV makes no representation of warranty, expressed or implied, regarding the information contained herein. Legrand | AV assumes no responsibility for accuracy, completeness or sufficiency of the information contained in this document.

Chief®. ConferenceSHOT® and Thinstall™are registered trademarks of Legrand AV Inc.

DEFINITIONS

MOUNTING SYSTEM: A MOUNTING SYSTEM is the primary Chief product to which an accessory and/or component is attached.

ACCESSORY: AN ACCESSORY is the secondary Chief product which is attached to a primary Chief product, and may have a component attached or setting on it.

COMPONENT: A COMPONENT is an audiovisual item designed to be attached or resting on an accessory or mounting system such as a video camera. CPU, screen, display. projector, etc.

WARNING: A WARNING alerts you to the possibility of serious injury or death if you do not follow the instructions.



CAUTION: A CAUTION alerts you to the possibility of

damage or destruction of equipment if you do not follow the corresponding instructions.



IMPORTANT SAFETY INSTRUCTIONS

WARNING: Failure to read, thoroughly understand, and follow all instructions can result in serious personal injury, damage to equipment, or voiding of factory warranty! It is the installer's responsibility to make sure all accessories are properly assembled and installed using the instructions provided.

WARNING: Exceeding the weight capacity can result in serious personal injury or damage to equipment! It is the installer's responsibility to make sure the combined weight of all equipment and accessories mounted on each TA210K shelf does not exceed 10 lbs (4.54 kg) per bracket.


WARNING: Use this accessory only for its intended use as described in these instructions. Do not use attachments not recommended by the manufacturer.

WARNING: Never operate this accessory if it is damaged. Return the accessory to a service center for examination and repair.



WARNING: Do not use this accessory outdoors.

--SAVE THESE INSTRUCTIONS--

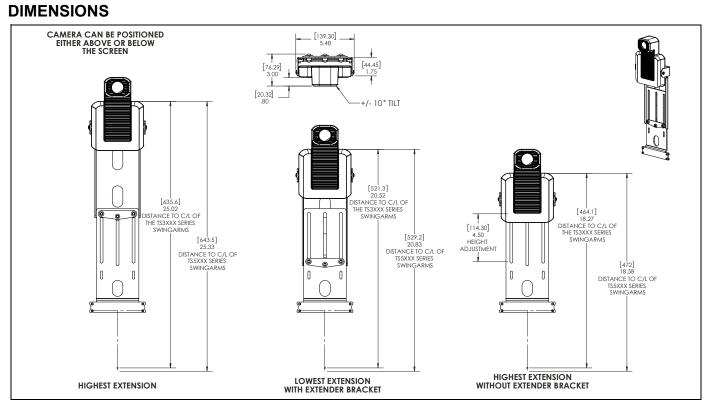


Installation Instructions TA210K

LEGEND


	Tighten Fastener	Pencil Mark
G	Apretar elemento de fijación	Marcar con lápiz
	Befestigungsteil festziehen	Stiftmarkierung
	Apertar fixador	Marcar com lápis
	Serrare il fissaggio	Segno a matita
	Bevestiging vastdraaien	Potloodmerkteken
	Serrez les fixations	Marquage au crayon
	Loosen Fastener	Drill Hole
9	Aflojar elemento de fijación	Perforar
	Befestigungsteil lösen	Bohrloch
	Desapertar fixador	Fazer furo
	Allentare il fissaggio	Praticare un foro
	Bevestiging losdraaien	Gat boren
	Desserrez les fixations	Percez un trou
	Phillips Screwdriver	Adjust
*	Destornillador Phillips	Ajustar
	Kreuzschlitzschraubendreher	Einstellen
	Chave de fendas Phillips	Ajustar
	Cacciavite a stella	Regolare
	Kruiskopschroevendraaier	Afstellen
	Tournevis à pointe cruciforme	Ajuster
	Open-Ended Wrench	Remove
0	Llave de boca	Quitar
	Gabelschlüssel	Entfernen
	Chave de bocas	Remover
	Chiave a punte aperte	Rimuovere
	Steeksleutel	Verwijderen
	Clé à fourche	Retirez
	By Hand	Optional
	A mano	Opcional
	Von Hand	Optional
	Com a mão	Opcional
	A mano	Opzionale
	Met de hand	Optie
	À la main	En option
		·
	Hex-Head Wrench	Security Wrench Llave de seguridad
	Llave de cabeza hexagonal Sechskantschlüssel	Sicherheitsschlüssel
	Chiave assagnale	Chave de segurança Chiave di sicurezza
	Chiave esagonale Zeskantsleutel	
		Veiligheidssleutel
	Clé à tête hexagonale	Clé de sécurité

TA210K Installation Instructions

TOOLS REQUIRED FOR INSTALLATION

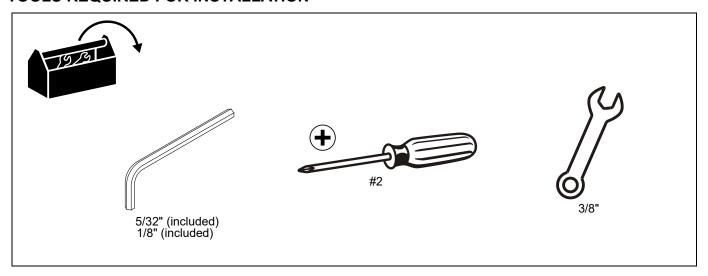

PARTS

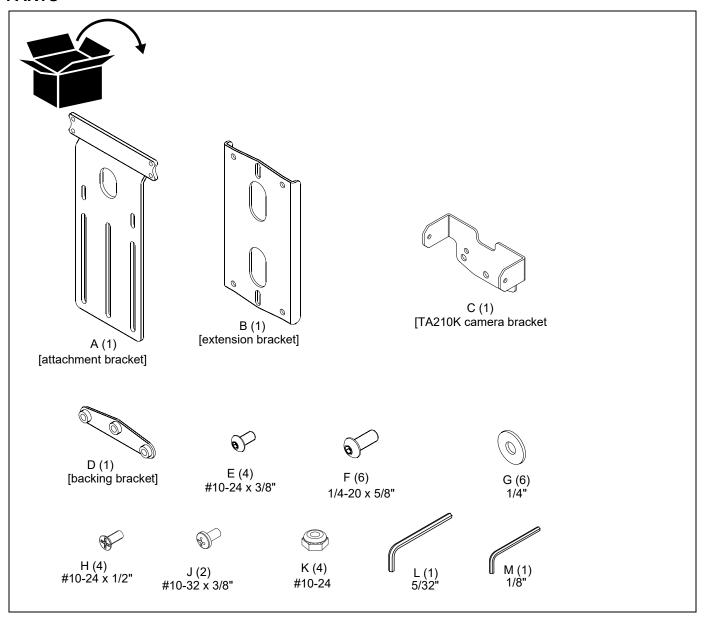

Installation Instructions TA210K

Installation

Shelf Assembly

 Use three 1/4-20 x 5/8" button head cap screws (F) and three 1/4" washers (G) to connect bracket (C) to either extension bracket (B) or attachment bracket (A). (See Figure 1)

NOTE: Use extension bracket (B) for larger displays or if component needs to be mounted further from the display.

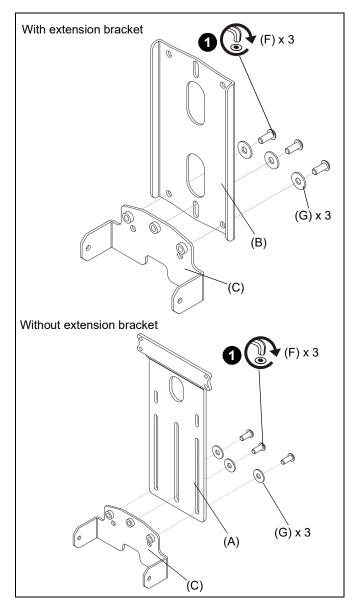


Figure 1

2. If using extension bracket, use three 1/4-20 x 5/8" button head cap screws (F) and three 1/4" washers (G) to attach extension bracket (B) to attachment bracket (A). (See Figure 2)

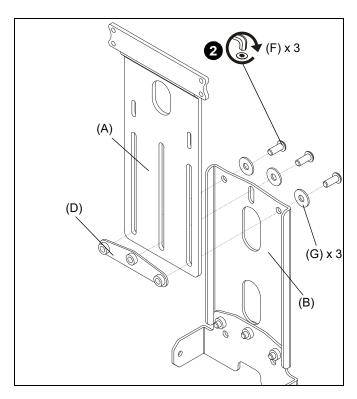


Figure 2

Installation to Faceplate TS525 or iCF50 Installation

NOTE: Display does NOT have to be removed for bracket installation.

 Use four #10-24 x 3/8" button head cap screws (E) to connect attachment bracket (A) to swing arm faceplate. (See Figure 3)

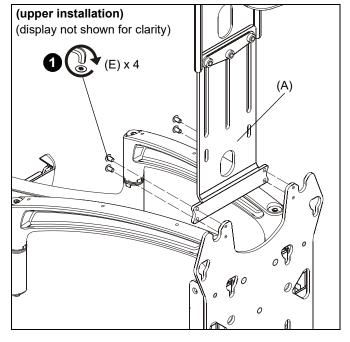
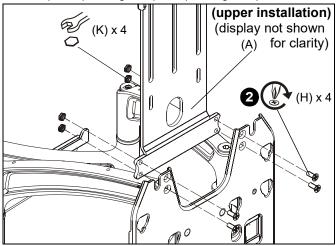



Figure 3

TA210K Installation Instructions

TS3XX or iCF30 Installation

- If already installed, remove display from faceplate. See swing arm installation instructions for details.
- Use four #10-24 x 1/2" Phillips head screws (H) and four #10-24 lock nuts (K) to connect attachment bracket (A) to faceplate. (See Figure 4) and (See Figure 5)



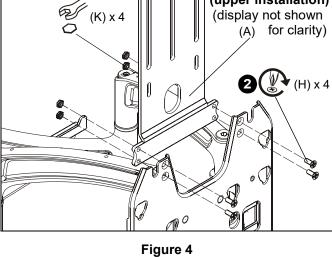

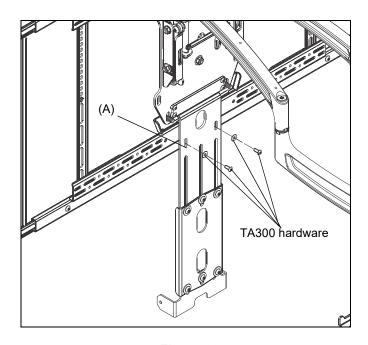


Figure 6



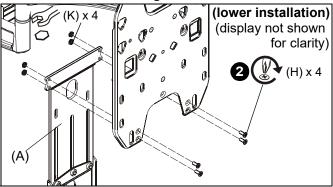


Figure 5

Reinstall display to faceplate. See swing arm installation instructions for details.


NOTE: If also installing side speaker brackets (TA300), attachment bracket (A) should also be attached to TA300 horizontal brackets for additional support. Use hardware provided with TA300. (See Figure 6)

Installation Instructions TA210K

Camera/Component Installation

WARNING: Exceeding the weight capacity can result in serious personal injury or damage to equipment! It is the installer's responsibility to make sure the combined weight of all equipment and accessories mounted on the TA210K brackets does not exceed 10 lbs (4.54 kg) per bracket.

 Install two #10-32 x 38" Phillips pan machine screws (J) through holes on camera bracket (C) and into holes on sides of camera. (See Figure 7)

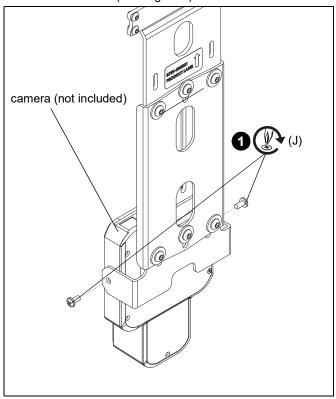

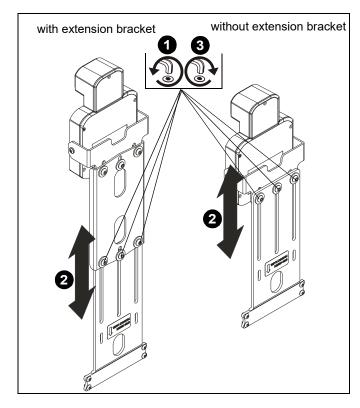


Figure 8

Figure 7

Adjustments

Height Adjustment

- Loosen three 1/4-20 x 5/8" button head cap screws (F) holding extension bracket (B) or camera bracket (C) to attachment bracket (A). (See Figure 8)
- 2. Adjust height of shelf (C) as desired.
- Tighten three 1/4-20 x 5/8" button head cap screws (F) holding extension bracket (B) or camera bracket (C) to attachment bracket (A). (See Figure 8)

TA210K Installation Instructions



A brand of Lilegrand

8800-003281 Rev00 ©2021 Legrand | AV www.legrandav.com 04/2021 **USA/International**

A 6436 City West Parkway, Eden Prairie, MN 55344

P 800.582.6480 / 952.225.6000

F 877.894.6918 / 952.894.6918

A Franklinstraat 14, 6003 DK Weert, Netherlands

P +31 (0) 495 580 852

F +31 (0) 495 580 845

Asia Pacific

Europe

A Office No. 918 on 9/F, Shatin Galleria

18-24 Shan Mei Street Fotan, Shatin, Hong Kong

P 852 2145 4099

F 852 2145 4477

