

OWNER'S MANUAL LG Digital Signage (MONITOR SIGNAGE)

Please read the user manual before using this product to ensure safe and convenient use.

75UH5J 86UH5J

TABLE OF CONTENTS

- Checking the Optional Accessories	J
- Learning the Buttons	4
	5

GETTING READY6

- Connecting the IR Sensor	6
- Portrait Layout	7
- Mounting and Removing the LG Logo	
Bracket	8
- Kensington Lock Device	10

CHECKING BEFORE

INSTALLATION	11
- Installation Orientation	11
- Installation Location	12
- Wall Mount Holder	

PRECAUTIONS FOR USE......14

-	Dust	14
-	Afterimage	14

PRODUCT SPECIFICATIONS..... 16

LI	CE	Ν	С	Ε.	 	 	 	 	 	2	2
			-		 	 	 	 	 		_

 
WARNING - This equipment is compliant with Class A of CISPR 32. In a residential environment this equipment may cause radio interference.

BASIC

- The accessories provided with your product may vary depending on the model or region.
- Product specifications or contents in this manual may be changed without prior notice due to upgrade of product functions.
- SuperSign Software & Manual
 - Visit https://partner.lge.com to download the latest SuperSign software and manual.

Checking the Accessories











Depending on country

Checking the Optional Accessories

In order to improve product performance, optional accessories are subject to change without prior notice. The illustrations in this manual may differ from the actual product and its accessories. Refer to the product manual for the components of the optional accessories.




KT-OPSF

• Before you attach the OPS (Open Pluggable Specification) PC, connect the cable to the port.

Learning the Buttons

The illustrations may differ depending on the model.

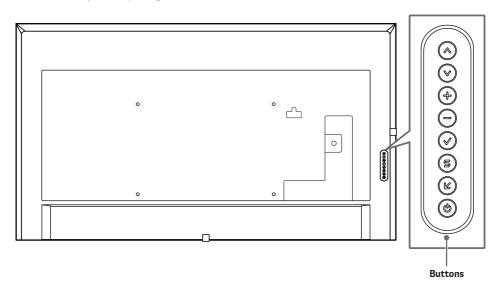

- (Adjusts up and down.
- 🔄 👄: Moves left and right.
- 🕢: Displays the current signal and mode.
- (s): Accesses the main menus, or saves your input and exits the menus.
- 😢: Change the input signal.
- (): Turns the power on or off.

GETTING READY


Connecting the IR Sensor

When you connect the cable to the product, the feature for receiving remote control signals is activated. Rotate the IR sensor according to the screen orientation (Landscape/Portrait).

- The image may be different according to the model.

Basic installation




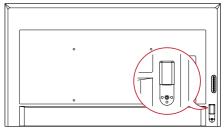


(Front)

(Rear)

Landscape scene

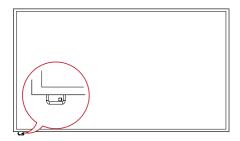


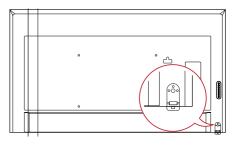



(Rear)

Portrait scene

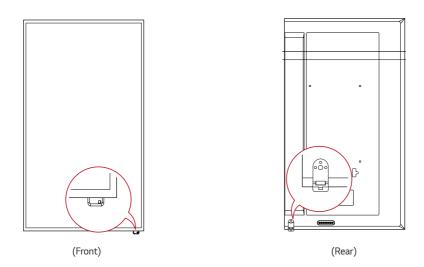

Portrait Layout

When installing in a portrait layout, rotate the monitor counterclockwise 90 degrees (when facing the screen).




Mounting and Removing the LG Logo Bracket


- Applies only to some models.
- The illustrations may differ depending on the model.

Removing the LG Logo Bracket

1 Lay a clean cloth on the floor, and then put the monitor on it with the screen face down. Remove the screws that secure the LG Logo Bracket to the bottom of the rear side of the monitor using a screwdriver.

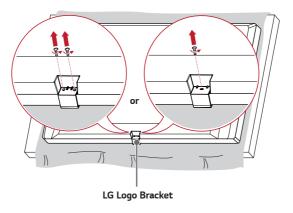


2 After removing the screw, remove the LG Logo Bracket. When re-attaching the LG Logo Bracket, repeat the process in reverse order.

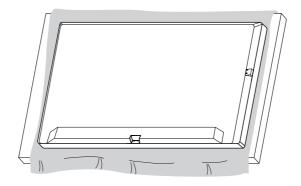


Attaching the LG Logo Bracket on the right side

1 Lay a clean cloth on the floor, and then put the monitor on it with the screen face down. Remove the screws that secure the LG Logo Bracket to the bottom of the rear side of the monitor using a screwdriver.

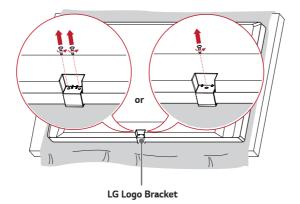

2 After removing the screw, remove the LG Logo Bracket. Attach the LG Logo Bracket with the screws, aligning it with the hole on the right side.

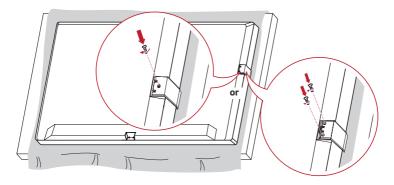


Kensington Lock Device

(This feature applies only to some models.)

The Kensington lock device connector is located on the back of the monitor. For more information on installation and use, refer to the user manual provided with the locking device.

Connect the Kensington security system cable between the monitor and a table.

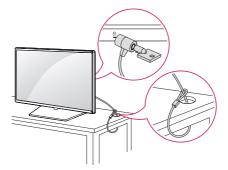

- The Kensington lock device is an optional specification.
- This is a general illustration of installation and may look different from the product held by the customer.

CHECKING BEFORE INSTALLATION

We are not responsible for product damage caused by failure to follow the guide.

Installation Orientation

Using Vertically


When installing vertically, rotate the monitor 90 degrees anti-clockwise while facing the front of the screen.



Tilt Angle



Ceiling, Floor Orientation

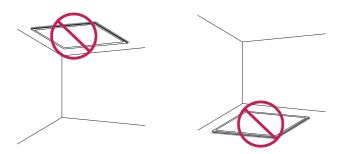


ENGLISH

Installation Location

We are not responsible for product damage caused by failure to follow the guide.

Indoor

Installing on a Wall

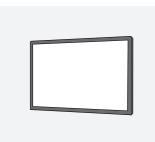




A: 100 mm or more

• The warranty will not cover any damage caused by using the product in direct sunlight on the front panel.

Installing on a Recessed Wall

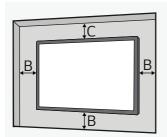



A: 100 mm or more

- B: 100 mm or more
- C: 100 mm or more
- The warranty will not cover any damage caused by using the product in direct sunlight on the front panel.

 
Outdoor

Outdoor Enclosed



Wall Mount Holder

To install the monitor on a wall, attach a wall mount holder (optional) to the back of the monitor. Take caution, and ensure that the wall mount holder (optional) is securely fixed to the monitor and to the wall. The VESA dimensions of the wall mount by model are as follows.



Model	VESA Dimensions (A x B) (mm)	Standard Dimensions	Length (Maximum) (mm)	Quantity
75UH5J	600 X 400	M8	12	4
86UH5J	600 X 400	M8	12	4

- Disconnect the power cord first, and then move or install the monitor. Otherwise, it may result in electric shock.
- If the monitor is installed on a ceiling or inclined wall, it may fall and result in injury.
- Damage to the monitor by tightening the screws too tightly may void your warranty.
- Use screws and wall mount plates conforming to VESA standards. Breakage or personal injury due to use or misuse of inappropriate components is not covered by the warranty of this product.

- Using screws longer than the indicated depth may damage the inside of the product. Be sure to use the proper length.
- · For more information on installation, please refer to the user manual for the wall mount.

ENGLISH

PRECAUTIONS FOR USE

Dust


The warranty will not cover any damage caused by using the product in an excessively dusty environment.

Afterimage

- After-image appears when the product is turned off.
 - Pixels may be damaged rapidly if a still image is displayed on the screen for a long period of time. Use the screensaver function.
 - Switching from a screen with high differences in luminance (black and white or grey) to a darker screen may cause an afterimage. This is normal due to the display characteristics of this product.
- When the LCD screen is in a still pattern for extended periods of use, a slight voltage difference may occur between the electrodes that operate the liquid crystal (LC). The voltage difference between the electrodes increases over time and tends to keep the liquid crystal aligned in one direction. At this time, the previous image remains, which is called an afterimage.
- Afterimages do not occur when continuously changing images are used but take place when a certain screen is fixed for a long time. The following are operational recommendations for reducing the occurrence of afterimages when using a fixed screen. The maximum recommended time for switching the screen is 12 hours. Shorter cycles are better for preventing afterimages.

• Recommended Usage Condition

- 1 Change the background colour and text colour at equal intervals.
- Afterimages occur less when the colours to be changed are complementary to one another.

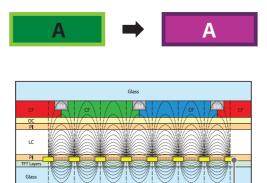

ITO or MoTi Pixel Layer

- 2 Switch the screen at equal time intervals.
- Take caution, and ensure that text or images from before the screen change are not left in the same location after the screen change.



PRODUCT SPECIFICATIONS

Without prior notice, all product information and specifications contained in this manual are subject to change to improve the performance of the product.

Input/Output Ports	HDMI IN 1, HDMI IN 2, HDMI IN 3, HDMI OUT, DVI-D IN, DP IN, LAN, USB 2.0 IN, RS-232C IN/OUT, AUDIO IN/OUT, IR & LIGHT SENSOR, OPS				
Resolution	Recommended Resolution	HDMI1 / HDMI2 / DisplayPort: 3840 x 2160 @ 60 Hz HDMI3 / OPS: 3840 x 2160 @ 30 Hz DVI-D: 1920 x 1080 @ 60 Hz			
	Max Resolution	- This may not be supported on some OS or graphics card types.			
Embedded battery	Applied				
	Operating Temperature	0 °C to 40 °C			
	Operating Humidity	10 % to 80 % (Condition for preventing condensation)			
Environmental Conditions	Storage Temperature	-20 °C to 60°C			
	Storage Humidity	5 % to 85 % (Condition for preventing condensation)			
		* Product box packaging storage conditions			
Audio	Input Sensitivity 0.7 Vrms				

Power Voltage	100-240 V~ 50/60 Hz 2.7 A		
	On Mode	170 W (Typ.)	
Power Consumption	Sleep Mode / Standby Mode	≤ 0.5 W	
Size (Width x Height x Depth) (mm) / Weight (kg)	1682.4 x 960.3 x 73.9 /	41.5	

86UH5J

Power Voltage	100-240 V~ 50/60 Hz 3.5 A		
	On Mode	200 W (Typ.)	
Power Consumption	Sleep Mode / Standby Mode	≤ 0.5 W	
Size (Width x Height x Depth) (mm) / Weight (kg)	1926.2 x 1097.2 x 78.3	/ 49	

ENGLISH

HDMI/ DVI-D/ DisplayPort/ OPS (PC) Support mode

Resolution	Horizontal frequency (kHz)	Vertical frequency (Hz)	Remark
800 x 600	37.879	60.317	
1024 x 768	48.363	60	
1280 x 720	44.772	59.855	
1280 x 1024	63.981	60.02	
1680 x 1050	65.29	59.954	
1920 x 1080	67.5	60	
3840 x 2160	67.5	30	HDMI1/2/3, DisplayPort, OPS
3840 x 2160	135	60	HDMI1/2, DisplayPort

HDMI/ DisplayPort/ OPS (DTV) Support mode

Resolution	Horizontal frequency (kHz)	Vertical frequency (Hz)	Remark
480/60p	31.5	60	
576/50p	31.25	50	
720/50p	37.5	50	
720/60p	45	60	
1080/50i	28.1	50	
1080/60i	33.75	60	
1080/50p	56.25	50	
1080/60p	67.432	59.94	
1080/60p	67.5	60	
2160/30p	67.5	30	HDMI1/2/3, DisplayPort, OPS
2160/50p	112.5	50	HDMI1/2, DisplayPort
2160/60p	135	60	HDMI1/2, DisplayPort

- Horizontal frequency: The horizontal interval is the time taken to display one horizontal line. When 1 is divided by the horizontal interval, the number of horizontal lines displayed every second can be tabulated as the horizontal frequency. The unit is kHz.
- Vertical frequency: The product display functions by the screen image changing dozens of times every second like a fluorescent lamp. The vertical frequency or refresh rate is the number of image displays per second. The unit is Hz.

Wireless module (LGSBWAC92) Specifications					
Wireless LAN (IE	EE 802.11a/b/g/n/ac)				
Frequency range (MHz)	Output power (Max.) (dBm)				
2400 to 2483.5	18				
5150 to 5725	18				
5725 to 5850	12				
Blu	etooth				
Frequency range (MHz) Output power (Max.) (dBm)					
2400 to 2483.5	8				
As band shannels can yory per country the user cannot shance or adjust the aperating frequency. This product is					

• As band channels can vary per country, the user cannot change or adjust the operating frequency. This product is configured for the regional frequency table.

• For consideration of the user, this device should be installed and operated with a minimum distance of 20 cm between the device and the body.

(Only Nigeria)

<u>Connection and use of this communication</u> <u>equipment is permitted by the Nigerian</u> <u>Communications Commission.</u>

(Only Hong Kong)

Wireless module (LGSBWAC92) Specifications		
Wireless LAN (IEEE 802.11a/b/g/n/ac)		
Frequency range (MHz)	Output power (Max.) (dBm)	
2400 to 2483.5	18	
5150 to 5350	18	
5725 to 5850	12	
Bluetooth		
Frequency range (MHz)	Output power (Max.) (dBm)	
2400 to 2483.5	8	
• As band channels can vary per country, the user cannot change or adjust the operating frequency. This product is		

 As band channels can vary per country, the user cannot change or adjust the operating frequency. This product is configured for the regional frequency table.

• For consideration of the user, this device should be installed and operated with a minimum distance of 20 cm between the device and the body.

ENGLISH

Wireless module (LGSBWAC92) Specifications		
Wireless LAN (IEEE 802.11a/b/g/n/ac)		
Frequency range (MHz)	Output power (Max.) (dBm)	
2400 to 2483.5	17.5	
5150 to 5350	17.5	
5725 to 5850	12	
Bluetooth		
Frequency range (MHz)	Output power (Max.) (dBm)	
2400 to 2483.5	8	
• As band channels can vary per country, the user cannot change or adjust the operating frequency. This product is		

 As band channels can vary per country, the user cannot change or adjust the operating frequency. This product is configured for the regional frequency table.

• For consideration of the user, this device should be installed and operated with a minimum distance of 20 cm between the device and the body.

(Only Philippines)

Wireless module (LGSBWAC92) Specifications		
Wireless LAN (IEEE 802.11a/b/g/n/ac)		
Frequency range (MHz)	Output power (Max.) (dBm)	
2400 to 2483.5	18	
5150 to 5725	18	
5725 to 5850	18	
Bluetooth		
Frequency range (MHz)	Output power (Max.) (dBm)	
2400 to 2483.5	8	
• As band channels can vary per country, the user cannot change or adjust the operating frequency. This product is		

 As band channels can vary per country, the user cannot change or adjust the operating frequency. This product is configured for the regional frequency table.

• For consideration of the user, this device should be installed and operated with a minimum distance of 20 cm between the device and the body.

FCC ID: BEJLGSBWAC92 / IC: 2703H-LGSBWAC92

LICENCE

22

Supported licenses may differ by model. For more information of the licenses, visit www.lg.com.



The terms HDMI, HDMI High-Definition Multimedia Interface, HDMI trade dress and the HDMI Logos are trademarks or registered trademarks of HDMI Licensing Administrator, Inc.

Manufactured under license from Dolby Laboratories. Dolby, Dolby Vision, Dolby Vision IQ, Dolby Audio, Dolby Atmos, and the double-D symbol are trademarks of Dolby Laboratories Licensing Corporation.



The Bluetooth[®] word mark and logos are registered trademarks owned by Bluetooth SIG, Inc. and any use of such marks by LG Electronics Inc. is under license. Other trademarks and trade names are those of their respective owners.





This product qualifies for ENERGY STAR®.

Changing the factory default configuration and settings or enabling certain optional features and functionalities may increase energy consumption beyond the limits required for ENERGY STAR® certification.

Refer to ENERGYSTAR.gov for more information on the ENERGY STAR[®] program.

Temporary noise is normal when powering ON or OFF this device.

The model and serial number of the product are located on the back and on one side of the product. Record them below in case you ever need service.

MODEL

SERIAL NO.